

# No. 12 Replacing the Combi-nozzle seal

**Safety  
First**



1. Loosen staple lock fitting with 6" nail



2. Remove staple lock fitting from nozzle housing



3. Remove spring from nozzle housing



4. Separate seal unit from staple lock fitting



5. Replace seal in seal unit



6. Fit seal assembly into staple lock fitting



7. Replace spring and staple lock fitting



8. Check that seal is in correct position



9. Tighten staple lock fitting with staple or nail

**Jackpot**<sup>™</sup>  
Keeping you safe at the face

**Hydrabolt**<sup>™</sup>  
Knowing you're safe at the face

ISO 9001:2008  
International accreditation

**New Concept Mining**

New Concept Mining (Pty) Ltd  
PO Box 125000, Alrode 1451  
109 Adcock Ingram Avenue, Aeroton, South Africa  
Fax 011 494 1060  
Tel 011 494 6000  
www.ncm.co.za

