

No. 2

Replacing the Jackpot nozzle seals

**Safety
First**



1. Remove plug with a 17mm spanner



2. Remove spring



3. Press out seal using a 6" nail



4. Remove seal from steel ring



5. Assemble new seal into ring



6. Push seal into nozzle



7. Check that seal is in correct position



8. Replace spring and plug



9. Tighten plug with spanner

JackpotTM
Keeping you safe at the face



ISO 9001:2008
International accreditation

New Concept Mining

New Concept Mining (Pty) Ltd
PO Box 125000, Alrode 1451
109 Adcock Ingram Avenue, Aeroton, South Africa
Fax 011 494 1060
Tel 011 494 6000
www.ncm.co.za

