



Jackpot™

Keeping you safe at the face


Installation Instructions

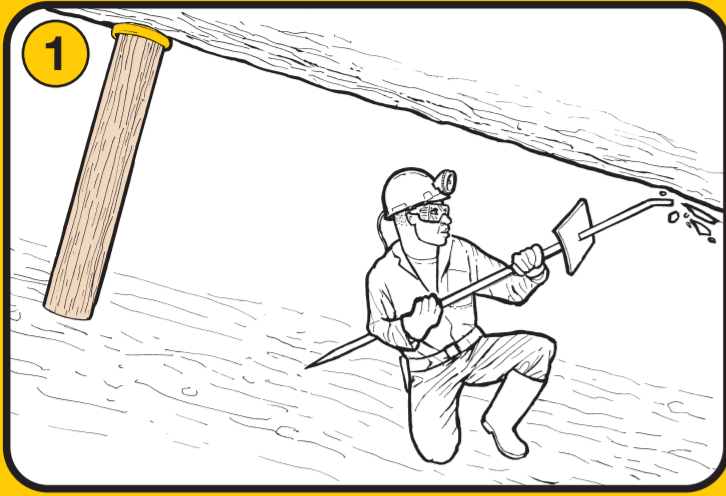


1. Select timber poles large enough to withstand the blast. Before installing the Jackpots, clear the hanging wall of loose rock and prepare a solid, even surface.

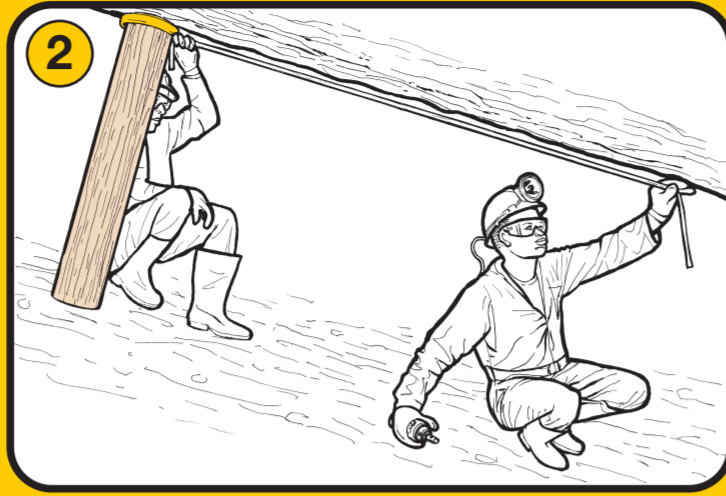


2. Measure and mark the positions for the poles on the hanging-wall according to your mine standards.

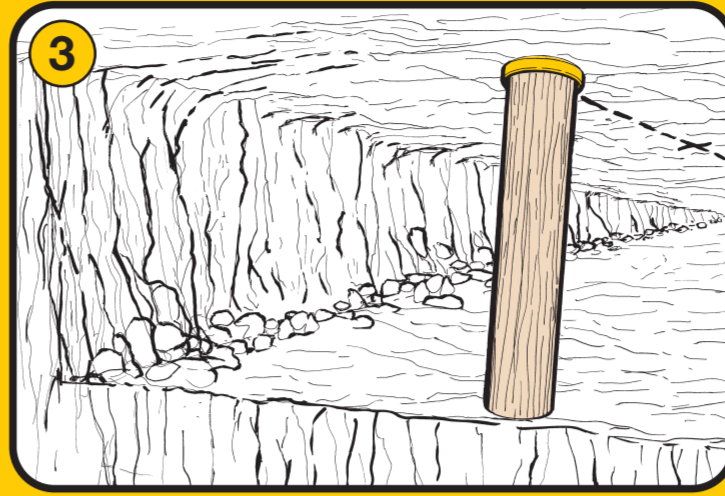


3. Make sure that the marks for the poles are in a straight line.

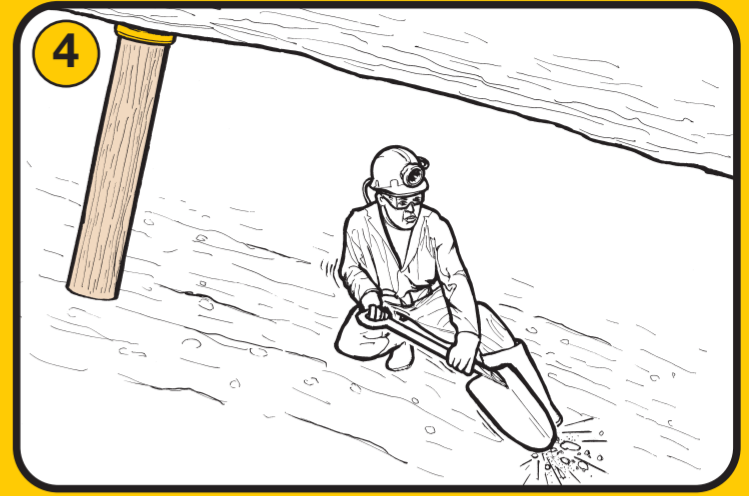


4. Clear the foot-wall of broken rock and prepare a solid surface.

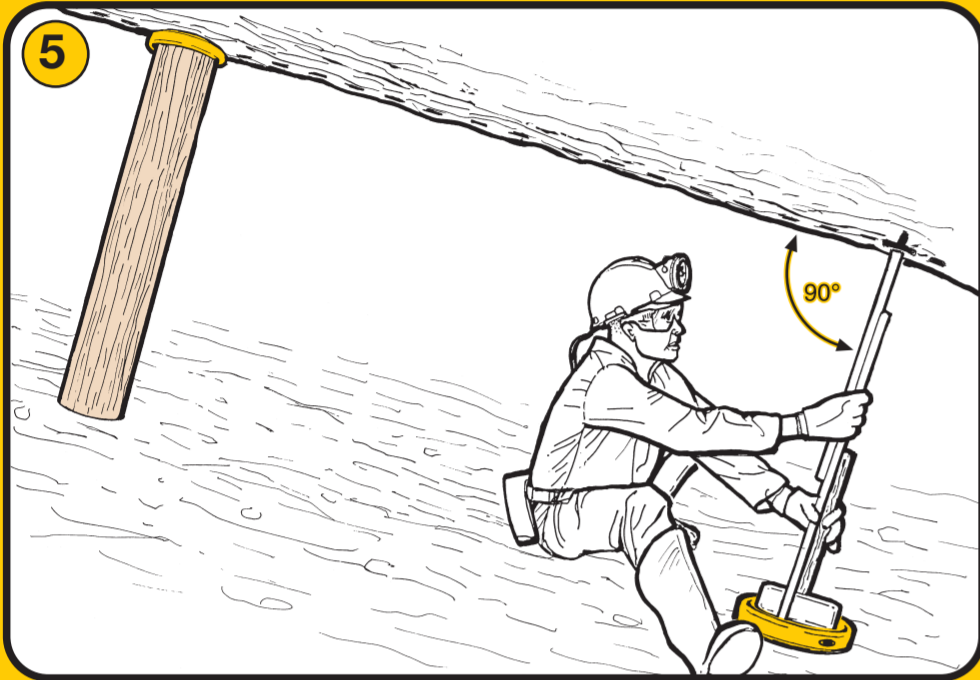

5. Using two sticks measure the distance between the hanging-wall and the foot-wall (Jackpot). Use a hammer to make sure you measure at 90° to hanging-wall.

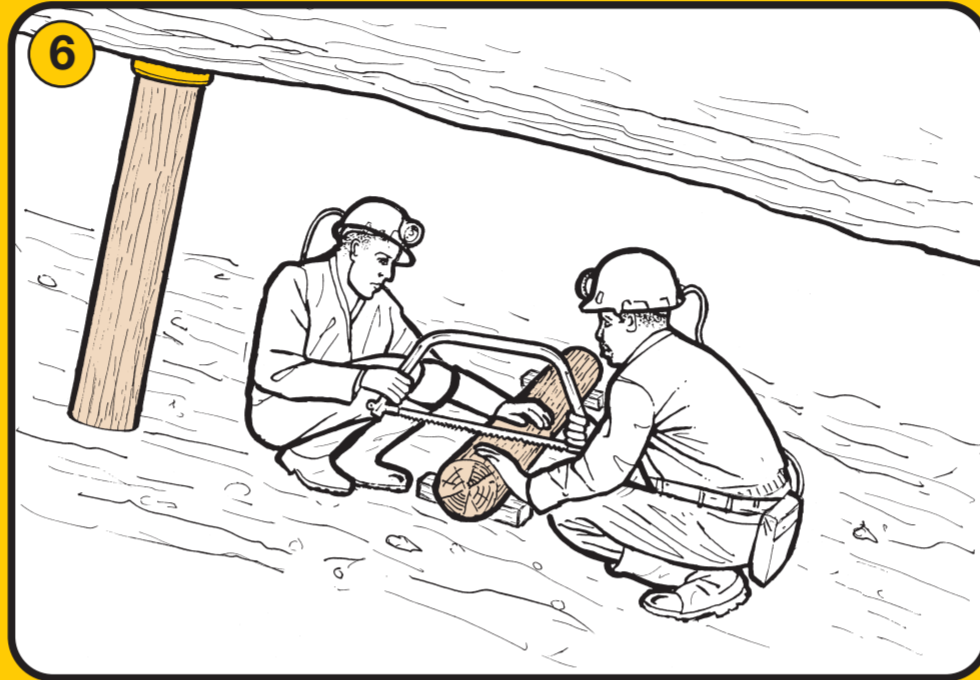


6. Cut the pole exactly to your measurement. A straight cut will reduce the amount of pumping required.

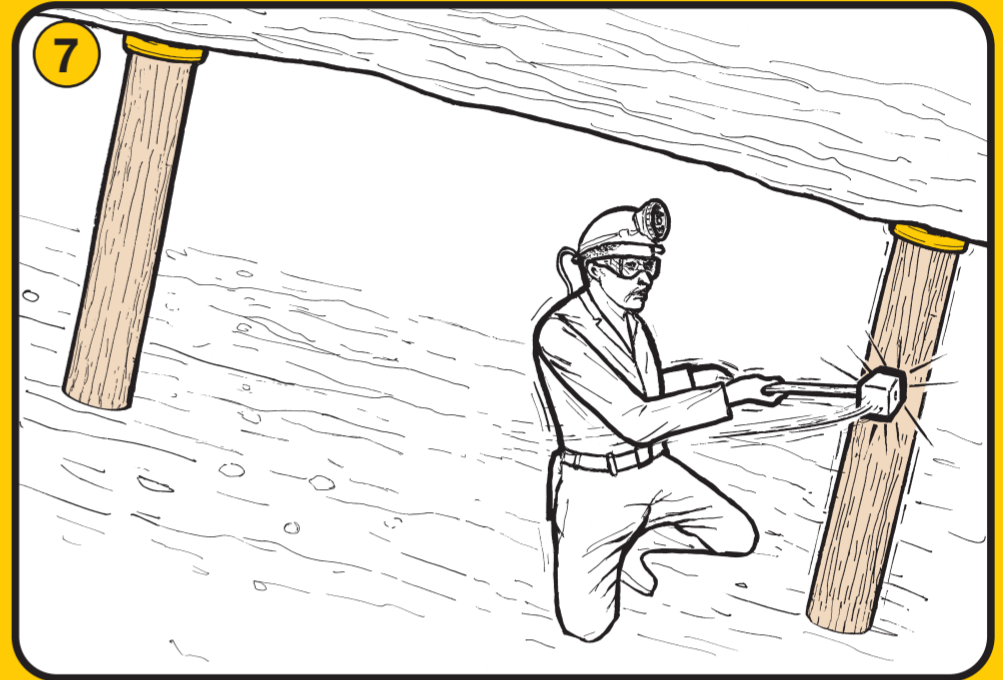

7. Place the Jackpot on top of the pole. Hammer the pole and Jackpot into position at 90° to the hanging-wall.

8 Installation using Jackpot Safety Pistol & Air Pump


IMPORTANT: ALWAYS WORK FROM A SUPPORTED/SAFE POSITION

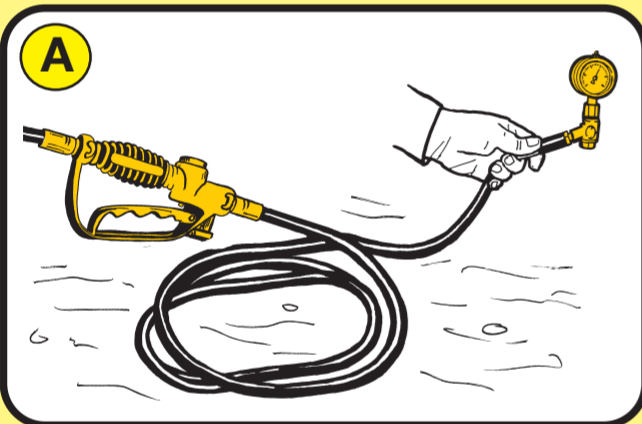

A. Check the relieving pressure daily (see "Pressure Setting" box). **METHOD:** Fit the pressure gauge to the nozzle at the end of the hose and pull the trigger.



B. Remove Jackpot cap, clean valve if required. Attach the nozzle.

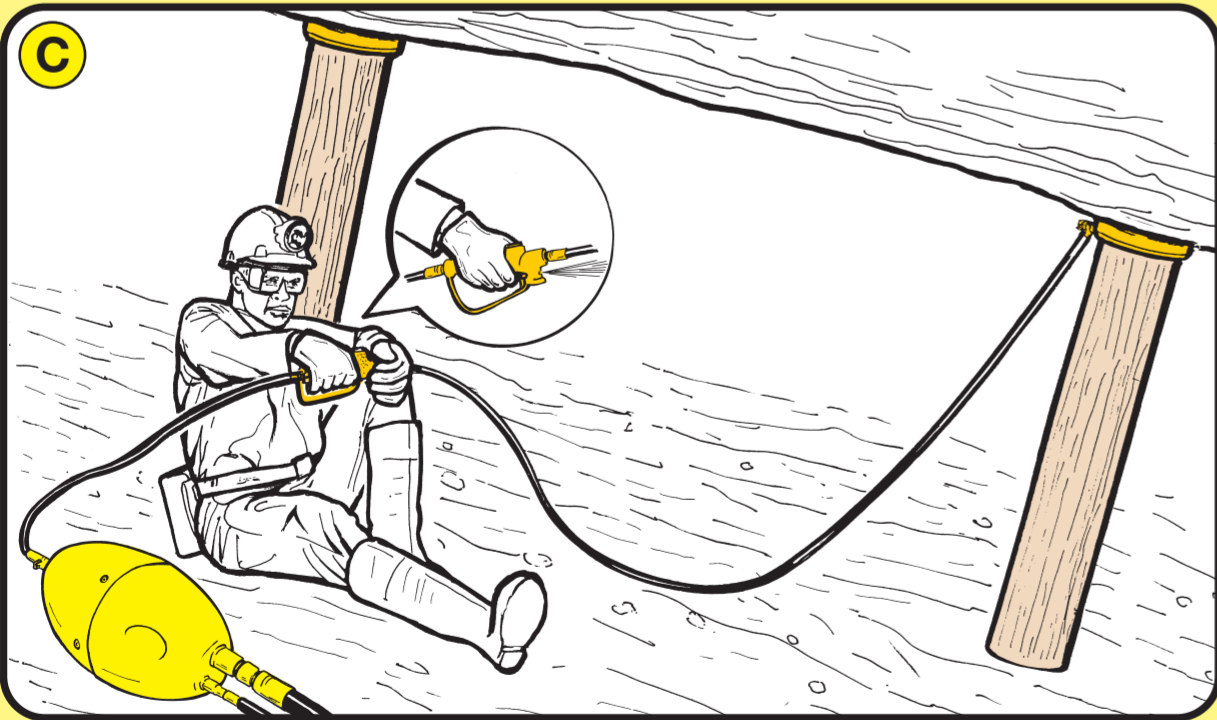

C. From a safe position pump water into the Jackpot using the Safety Pistol. When the correct pressure is reached, water will squirt out of the Safety Pistol relief valve.

Pressure Setting

For safety reasons the pressure relief valves on the Pistol and Combi-Nozzle must not be tampered with.


These are factory set to the required mine standard.

The relief pressure can be checked underground by connecting the Jackpot pressure gauge.

When the Combi-Nozzle or Safety Pistol does not relieve at the correct pressure it should be sent to surface for service.



8 Installation using Jackpot Safety Pistol & High Pressure Air Pump

IMPORTANT: ALWAYS WORK FROM A SUPPORTED/SAFE POSITION

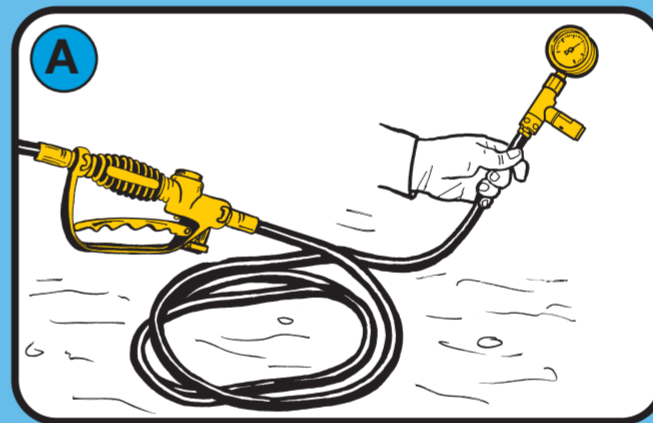


A. Check the relieving pressure daily (see "Pressure Setting" box).


METHOD: Fit the pressure gauge to the nozzle at the end of the hose and pull the trigger.

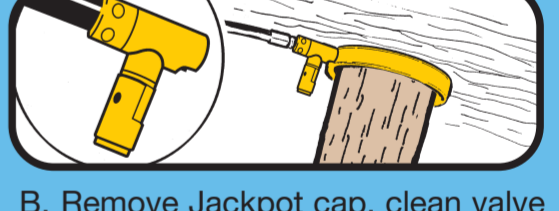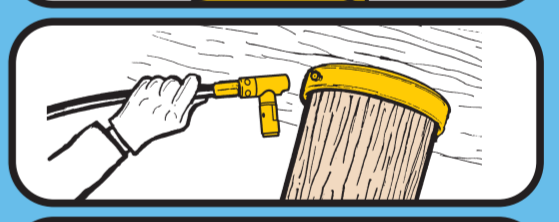

B. Remove Jackpot cap, clean valve if required. Attach the nozzle.


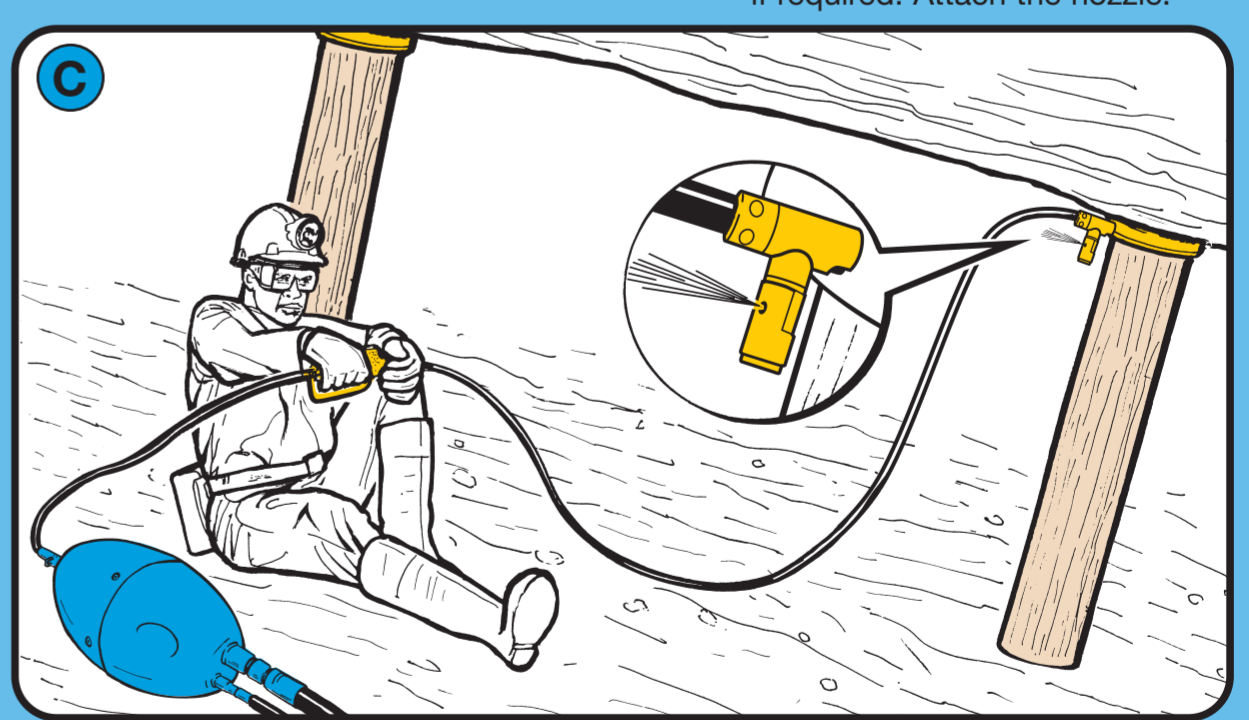


C. From a safe position pump water into the Jackpot using the Safety Pistol. When the correct pressure is reached, water will squirt out of the Combi-Nozzle relief valve.

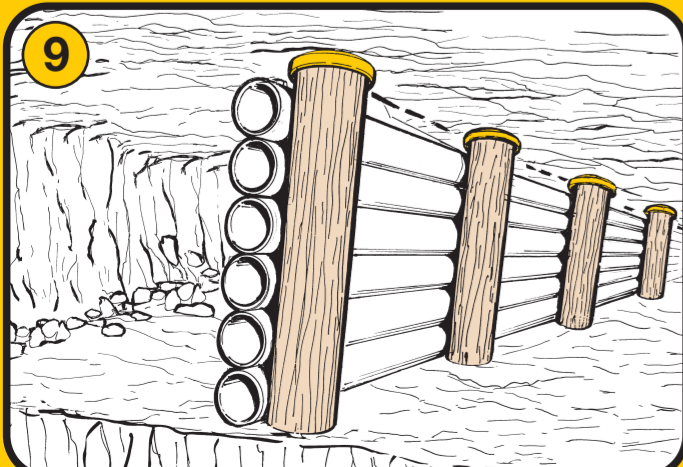

9. When looking at the installed props from the top or bottom of the panel, only one stick should be visible; (all are in a straight line). The blast barricade can now be fitted.

The key Jackpot accessories are:

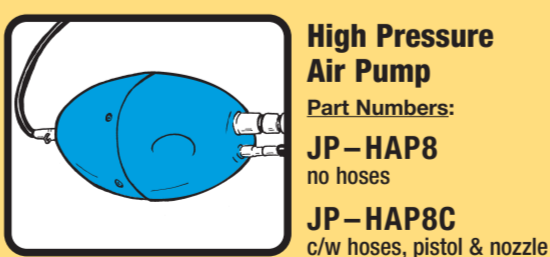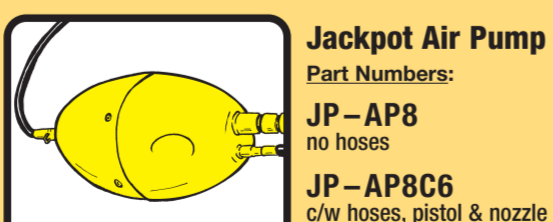

Safety tips and hints:

1. POSITION YOURSELF IN A SUPPORTED AREA WHEN INSTALLING.
2. Check daily for leaks on pump, hoses and nozzle. Repair any leaks immediately.
3. Always make sure you are wearing gloves and safety goggles when installing Jackpots.
4. The sticks should be measured and cut accurately and hammered into position for best results, (before inflating Jackpot).
5. Accurate measuring and cutting also reduces the amount of pumping required as the correct pressure is reached sooner.
6. Check the relieving pressure daily. This will ensure all support installations are as solid as possible.

