




1. Bar down and make safe from the top of the panel, working from a position of safety.

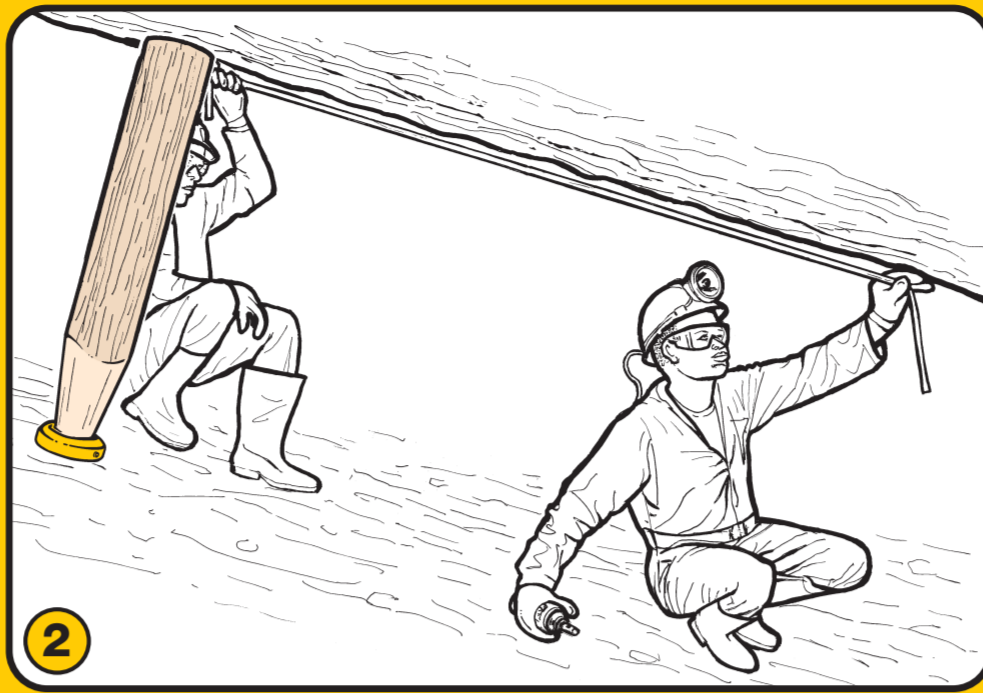


2. Measure and mark the positions for the props on the hanging-wall according to your mine standards.

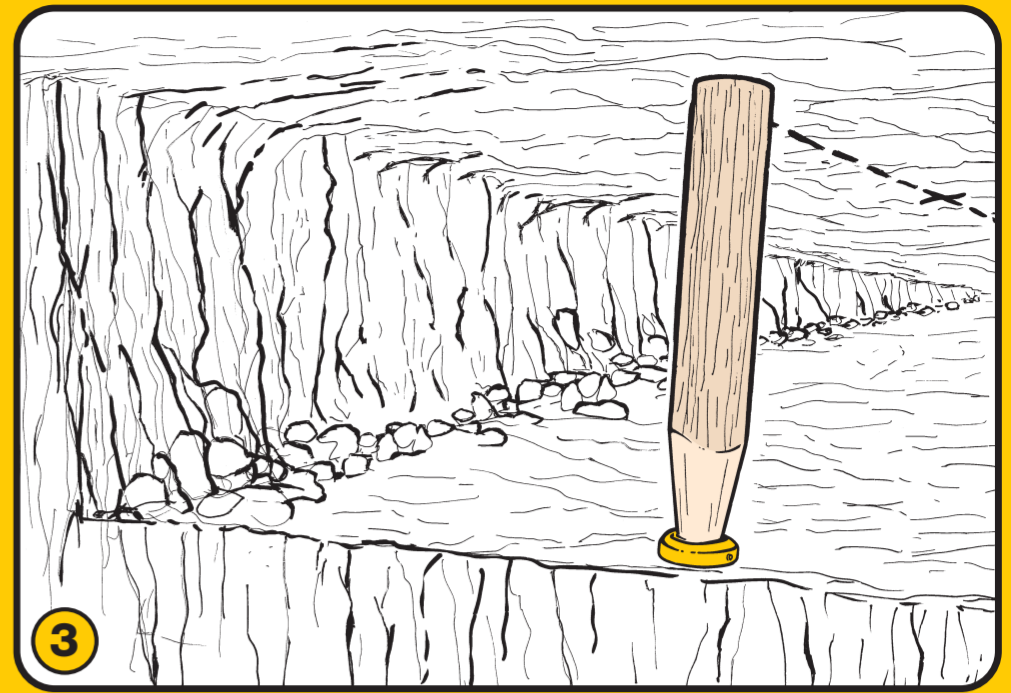


3. Install the props from the top of the panel at the marked positions.

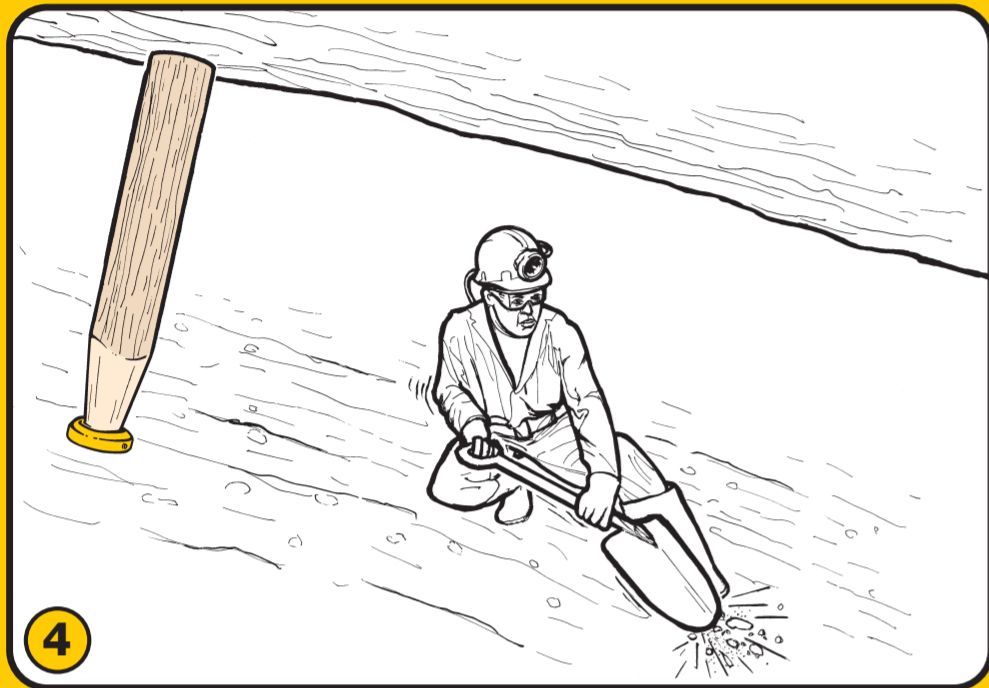


4. Clear the foot-wall of rock from a safe supported position.

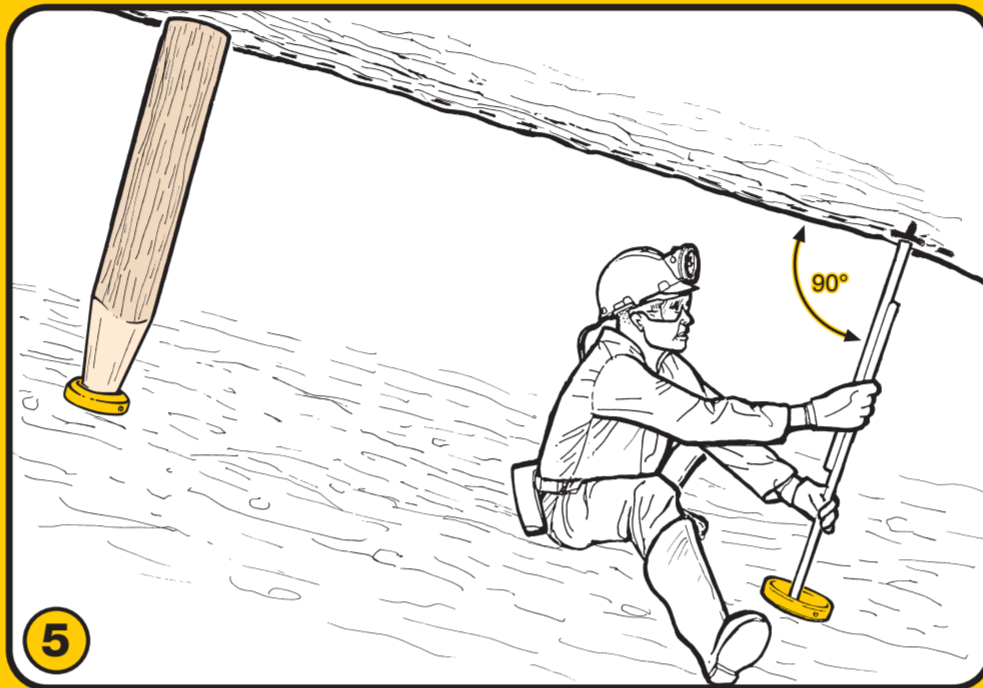


5. Measure height at the installation point.

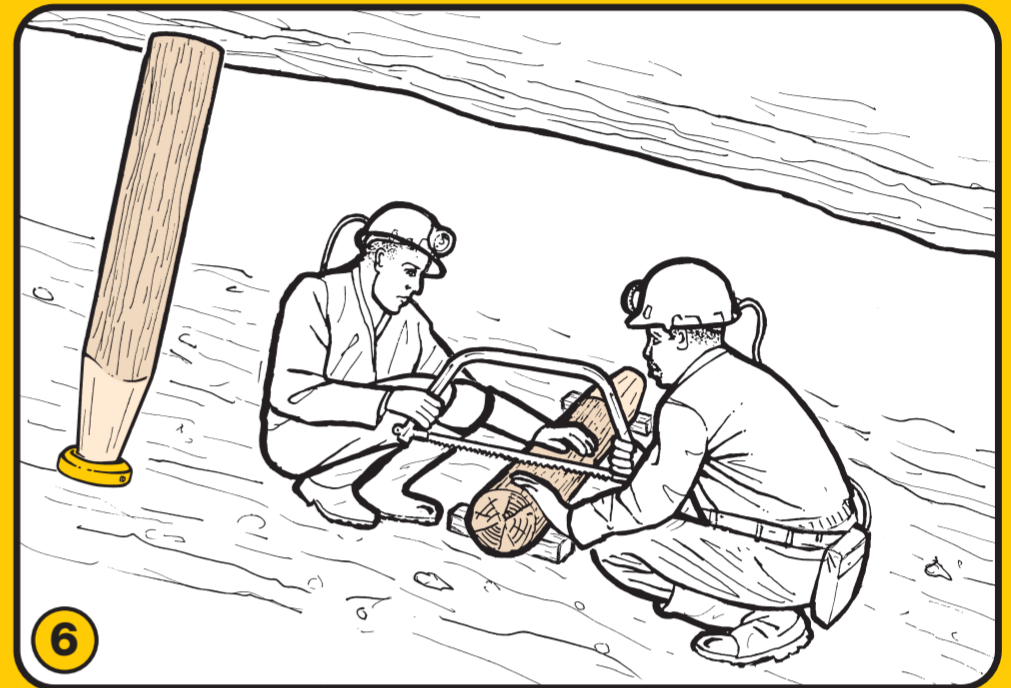

6. Mark off correct height and cut to size. **Do not cut the prop on the pencil end.**

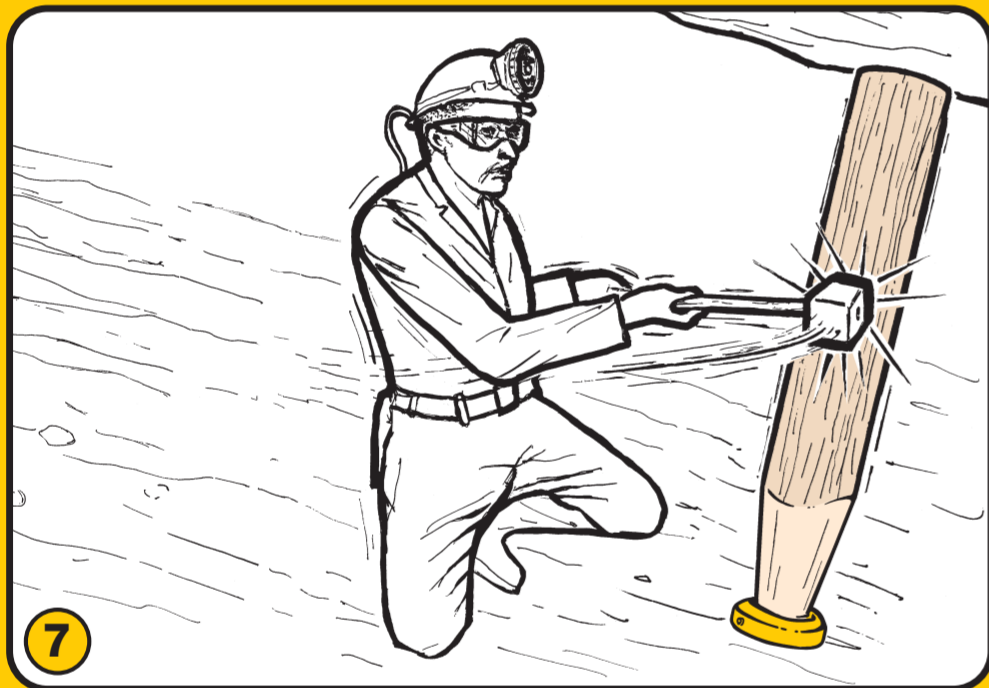

7. Place Jackpot on top of prop. Hammer prop into prepared position at 90° to hanging wall.

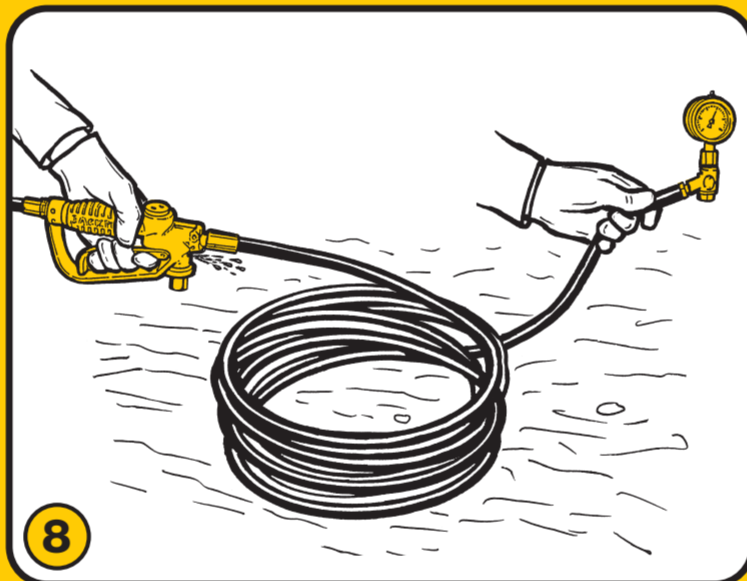

8. Check the relieving pressure daily (see "Pressure Setting" box).

METHOD: Fit the pressure gauge to the nozzle at the end of the hose and pull the trigger.

Pressure Setting

For safety reasons the pressure relief valve on the Safety Pistol is factory set and cannot be tampered with.

The relief valve is set at 12 – 14MPa. The relief valve should be checked underground by connecting the Jackpot pressure gauge.


When the Safety Pistol does not relieve at the correct pressure it should be sent to surface for service.




9. Remove Jackpot cap, clean valve if required. Attach the nozzle.



IMPORTANT: ALWAYS WORK FROM A SUPPORTED/SAFE POSITION

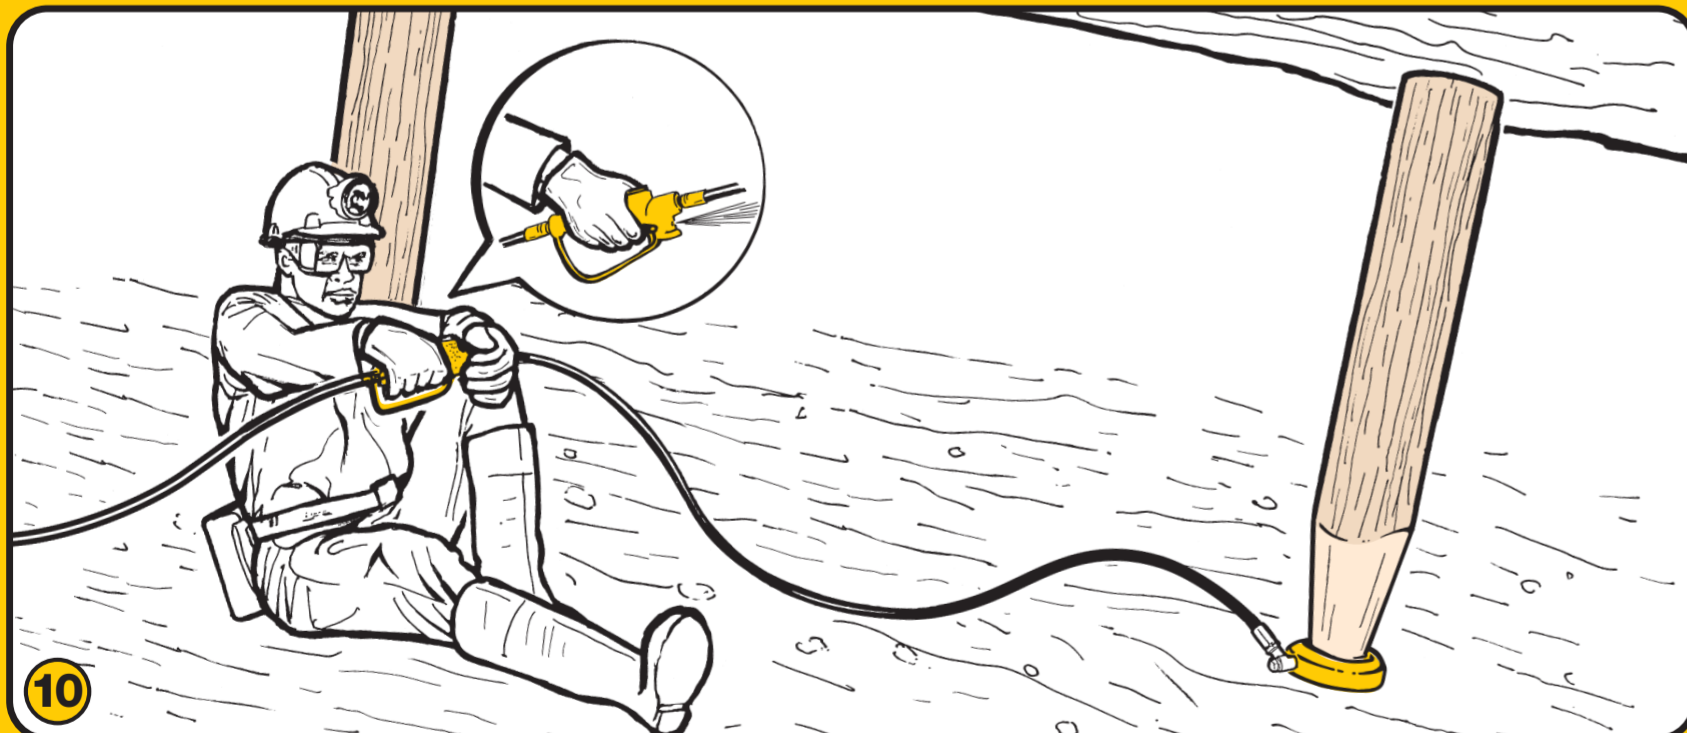

10. From a safe position pump water into the Jackpot using the Safety Pistol. When the correct pressure is reached, water will squirt out of the relief valve.

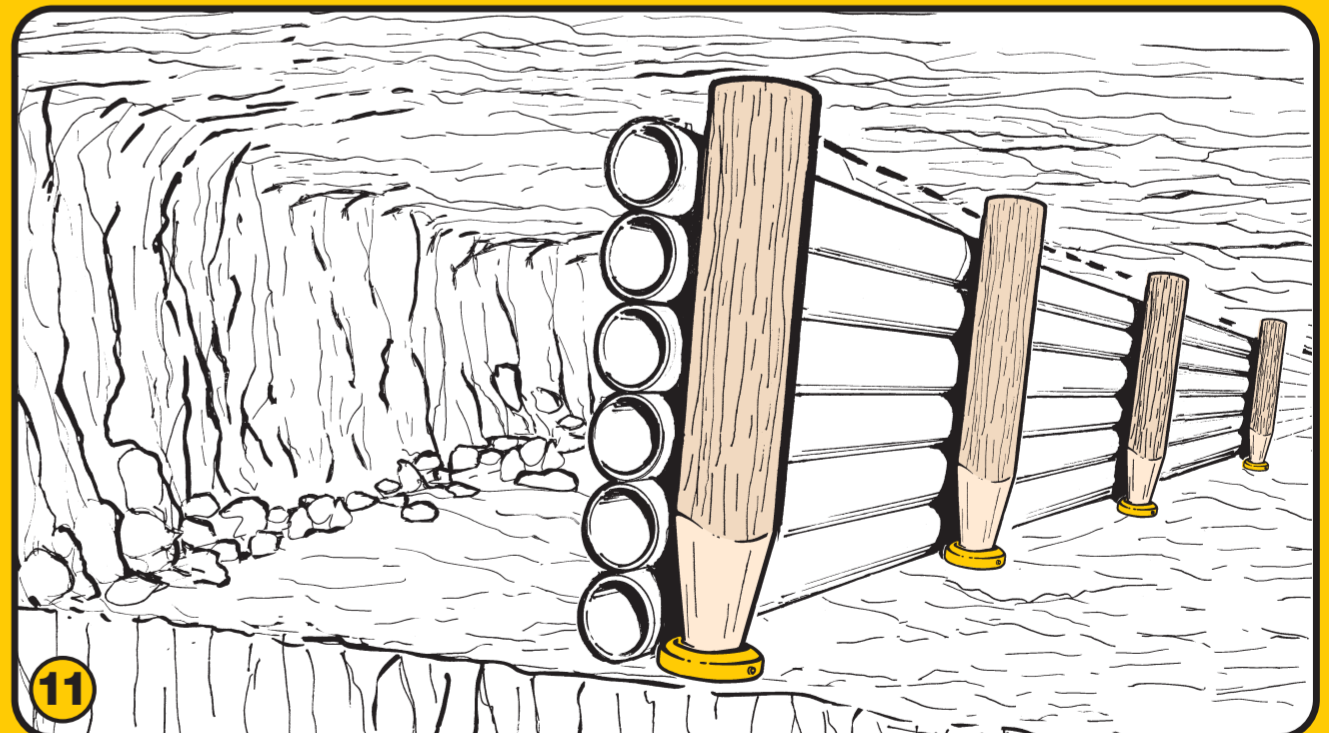

11. When looking at the installed props from the top or bottom of the panel, only one prop should be visible; (all are in a straight line). The blast barricade can now be fitted if required.

Safety tips and hints:

- 1. POSITION YOURSELF IN A SUPPORTED AREA WHEN INSTALLING.**
- Always make sure you are wearing gloves and safety goggles when installing Jackpots.
- The props should be measured accurately and hammered into position for best results, (before inflating Jackpot).
- Accurate measuring reduces the amount of pumping required as the correct pressure is reached sooner.
- Check the relieving pressure daily. This will ensure all support installations are as solid as possible.

The key Jackpot accessories are:




Jackpot Safety Pistol
Part No: JP-SP13 (no hoses)




Jackpot Safety Pistol with hoses & nozzle
Part No: JP-SP13C6



Jackpot Pressure Gauge
Part No: JP-GPR

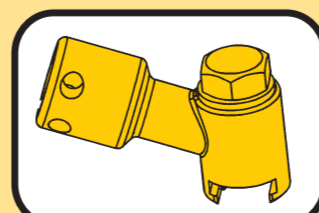

Jackpot Nozzle
Part No: JP-NZS6

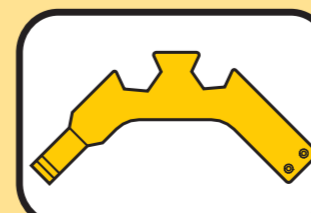

Jackpot Setting Tool
Part No: JP-ST5

ISO 9001:2008
international accreditation

New Concept Mining
New Concept Mining (Pty) Ltd
PO Box 125000, Alrode 1451
109 Adcock Ingram Avenue, Aeroton, South Africa
Fax 011 494 1060
Tel 011 494 6000
www.ncm.co.za

